



Covering All Your Rental Needs

www.pacificpartycanopies.com

Champagne Fountain 5-Gallon (100 six-ounce servings)

Please read the following operating instructions carefully before using the Champagne Fountain. If you have any questions, please call us at (360) 707-2115.

CAUTION, please:

- Do not run fountain dry.
- Do not cut off ground prong on plug.
- Do not place near swimming pool or other water source.
- Set on stable surface and be sure cord is not across walking aisle.
- Use with **pulp-free** beverages only.
- Carry fountain by base only.
- Do not disassemble fountain unless you have been authorized to do so.

Start-up

1. Place fountain in desired location. Carry the fountain by the main bowl only. Do not carry the fountain by the tulip top.
2. Fill the fountain with the desired **pulp-free** beverage.
3. Plug into a grounded outlet and turn on switch (lights remain on when plugged in).
4. Allow fountain to run for a couple of minutes to prime the pump. Beverage will pump from four spouts around the lighted column.
5. Refill or discontinue use if fountain runs below 4 servings.
Do not run fountain dry.

General Cleaning Instructions

1. Turn off fountain power switch.
2. **DO NOT EMPTY FOUNTAIN BY TIPPING IT OVER!** Tipping the fountain can cause fluid to run up inside the column, damaging the electrical system.
3. Scoop out as much beverage as you can with a ladle, and use an absorbent paper towel to soak up any remaining liquid.
4. Run one gallon of warm water through the fountain for ten minutes. This will help to dissolve any sugar that may have accumulated near the pump shaft seal.
5. Empty the water from the fountain using the same guidelines as in steps 2 and 3 above.
6. Wipe fountain dry, and return to plastic bag in which it was delivered.